


# Instructions For Use

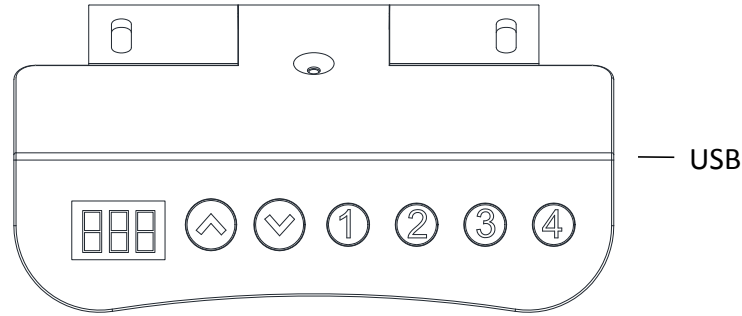

**IMPORTANT: You must reset the desk prior to use.**

**Reset Procedure:**

1. Press and hold the DOWN button on the handset until the desk reaches its lowest height.
  2. Release the DOWN button.
  3. Press and hold the DOWN button about 5 seconds until the handset display reads "RST", the desk slightly rises 5mm and stops.
  4. Release the DOWN button. The desk is now ready for use.
- Note: When the LED display shows an error code, the desk must be RESET prior to use.

**Adjust desk height**

Press the UP or DOWN button to adjust the height of the desk.

**Memory setting**

1. Press the UP or DOWN button to move the desk to the desired height.
2. Press and hold the "1, 2, 3, or 4" button about 2 seconds until the LED display "S-".

**Lock the handset:**

1. Press and hold the "4" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show LOC.
3. Handset is now locked.

**Unlock the handset:**

1. Press and hold the "4" and "2" buttons for about 5 seconds until the sound "di".
2. LED will show the height display.
3. Handset is now unlocked.

**Upper and Lower Height Limits:**

**Set the UPPER Limit:**

1. The handset display height > 92.5mm.
2. Press and hold the UP and DOWN buttons for about 5 seconds until the handset sounds "di."
3. The desk upper limit height setting is successful.

**Set the LOWER Limit:**

1. The handset display height < 92.5mm.
2. Press and hold the UP and DOWN buttons for about 5 seconds until the handset sounds "di."
3. The desk lower limit height setting is successful.

**Removing the Upper or Lower Position:**

1. Press the "UP" and "DOWN" button together for about 5 seconds until the sounds "di".
2. The upper or lower limits are now removed.

**Changing the anti-collision sensitivity:**

1. Press and hold buttons "3" and "4" until the sounds "di", handset display show number 0, 1, 2, 3, 4, 5, 6, 7, or 8.
  - 0 = Close the anti-collision function
  - 1, 2, 3 = Least sensitive
  - 4, 5, 6 = Middle sensitive
  - 7, 8 = Most sensitive
2. Press the "UP" or "DOWN" button to switch the number Middle (#4, 5, 6) or Least sensitive (#1, 2, 3).
3. Press and hold the "UP" and "4" buttons until sounds "di", the desk is now ready to use.

**Changing from inches to centimeters: (CN is centimeters. IH is inches).**

Press and hold the "4" and "1" buttons (about 5 seconds), until the LED switches to "CN", and "IH".

**TROUBLESHOOTING:**

Error code	Error cause	Measure
E05	Anti-collision issue	Please change the anti-collision sensitivity, least or middle sensitive the desk will be ready to use
ERR	<ol style="list-style-type: none"> <li>1. Handset disconnected</li> <li>2. Lifting legs disconnected</li> <li>3. Leg or handset faulty</li> </ol>	Ensure that the lifting leg connection to the hexagonal rod, and that all cables are connected to the handset. Execute <b>RESET</b> . (Abnormal sound of the lifting leg, please replace the leg)

If the error cannot be corrected through the described measure:

- Unplug the power plug.
- Wait approx. 5 minutes
- Execute RESET.

If an error still occurs after these steps have been executed. Please contact your sales rep.